

The RKAT Installation Manual assumes that you will splice additional wire into the supplied DB25 connector and cable assembly and does not include detailed instructions for building your own cable.

Use the table below for the correct pin number connections. For a PC, use a DB9 or DB25 Female connector; for a Serial Printer, use a DB25 Male connector.

RS-232 Wiring for RKAT Audit Trail			
RKAT WIRE COLOR	FUNCTION	DB9 PINS	DB25 PINS
Red	RXD	3	2
Orange	CTS	4	20
Brown	TXD	2	3
Black	GND	5	7