

A low-angle, upward-looking photograph of several modern skyscrapers with glass facades, set against a bright blue sky with scattered white clouds. The buildings are arranged in a way that they appear to converge towards the top center of the frame, creating a sense of height and scale.

Adding Facility Codes


Securakey  Access Control

Adding a Facility Code/ *from SK-NET*

The SK-ACP, SK-ACPE and SK-MRCP can learn up to 16 Facility Codes


- When possible, use only one facility code
- When not possible, easily add one from SK-NET

1. Right click on any Reader Name

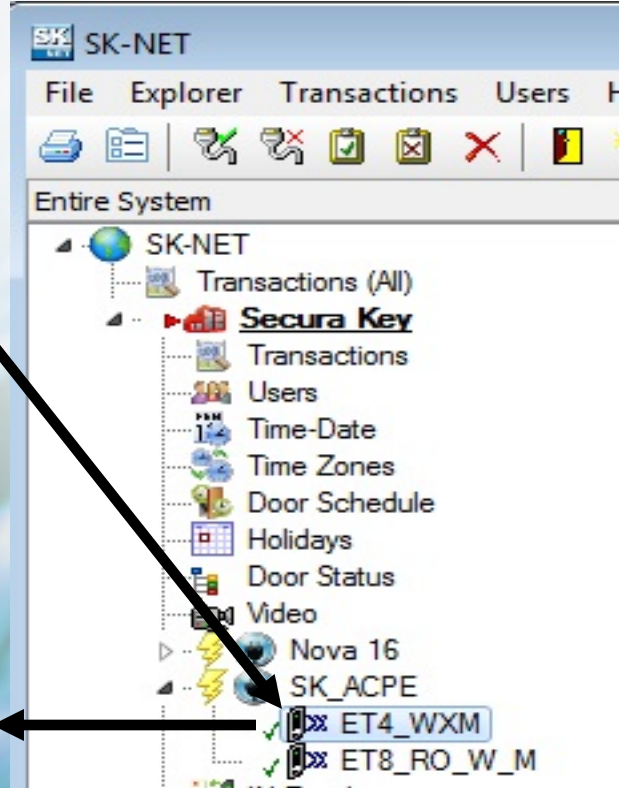

2. Select Properties


3. Select Service tab

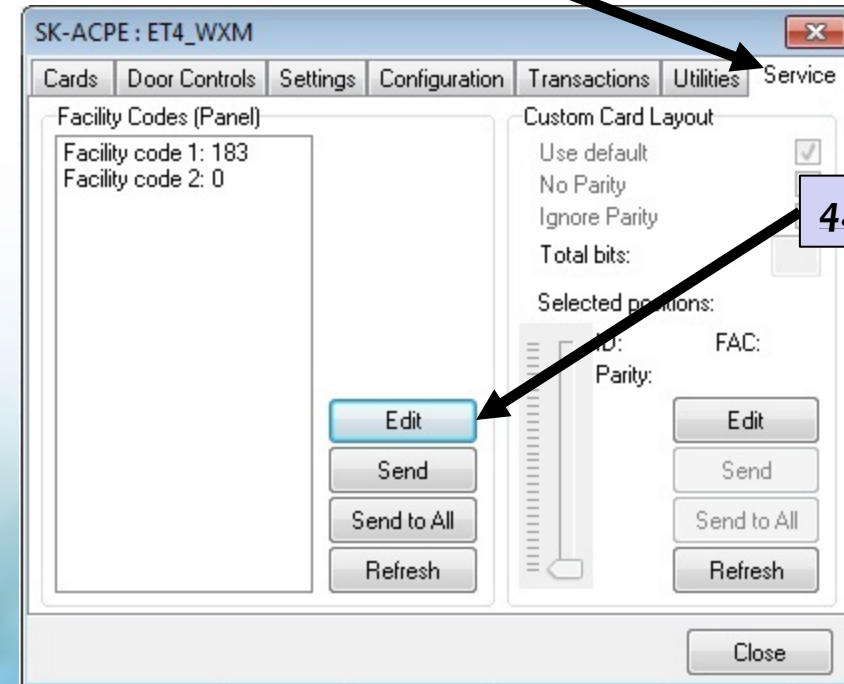

4. Edit

Adding a Facility Code / from SK-NET


5. Add

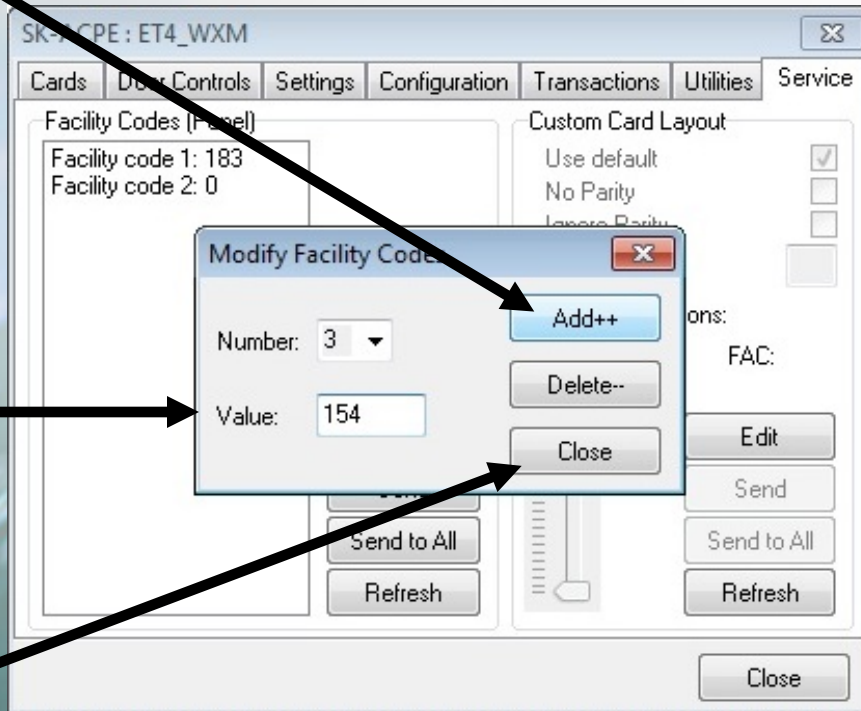

6. Enter the Value
(Known Facility
Code i.e. 154)

7. Close

8. Send to All

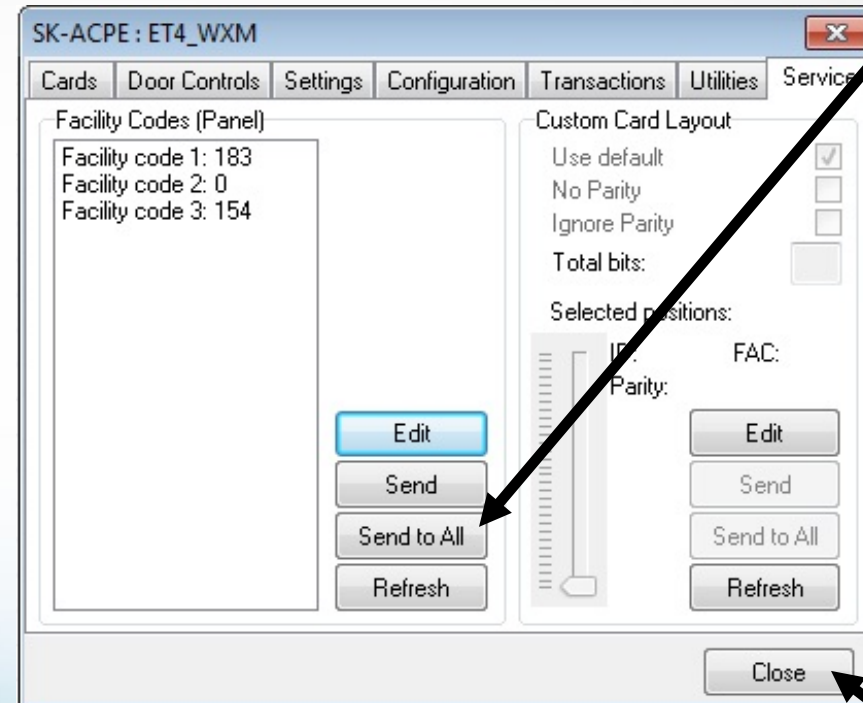


9. Close

10. After Closing the Readers Properties, **Backup** when prompted

To Manually Add a Facility Code

1. **Right Click** on a reader associated with the control panel

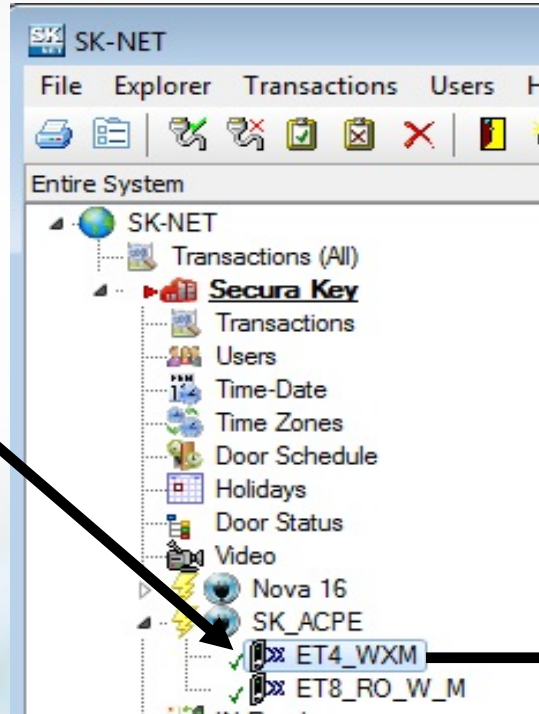


2. **Select Properties**

To Manually Add a Facility Code

3. Select Service tab

4. Make a list of all current facility codes displayed (max 16)


- (In this case)
- FC 1: 183
 - FC 2: 0

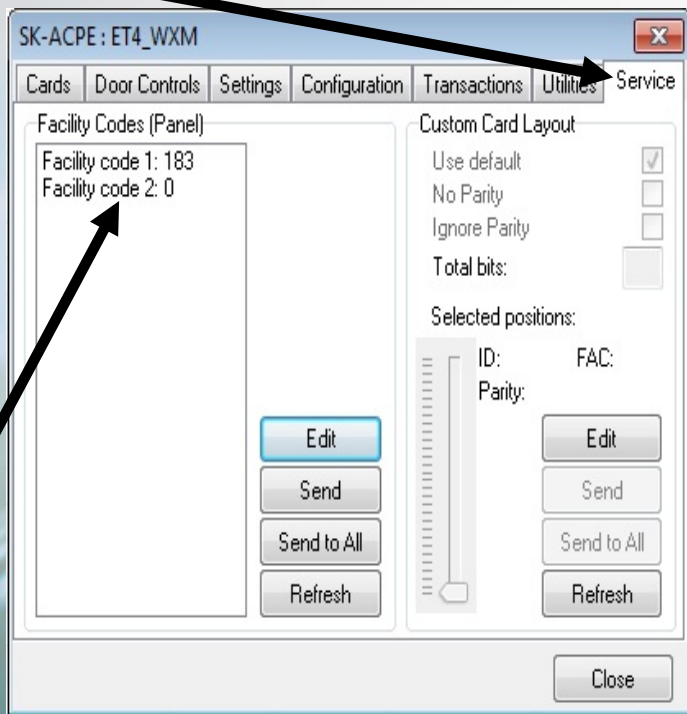

5. Press the reset button on the control board associated with the reader

6. Within 8 seconds of pressing the reset button, present a single card with each facility code to the reader


The old facility code/s will disappear and the new one/s will appear

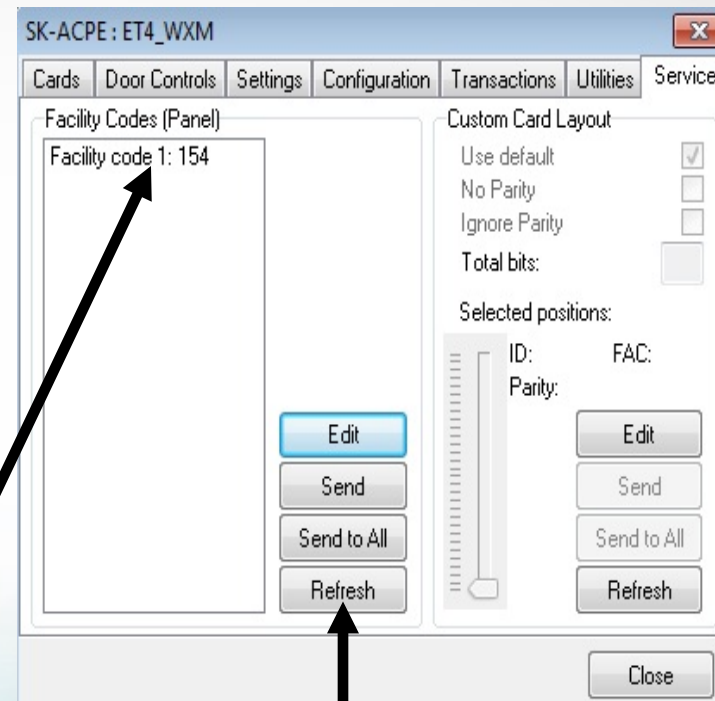

7. Refresh

If there are multiple control boards in the system, use SK-NET to send the new Facility Codes to all the readers that are connected

To Manually Add a Facility Code

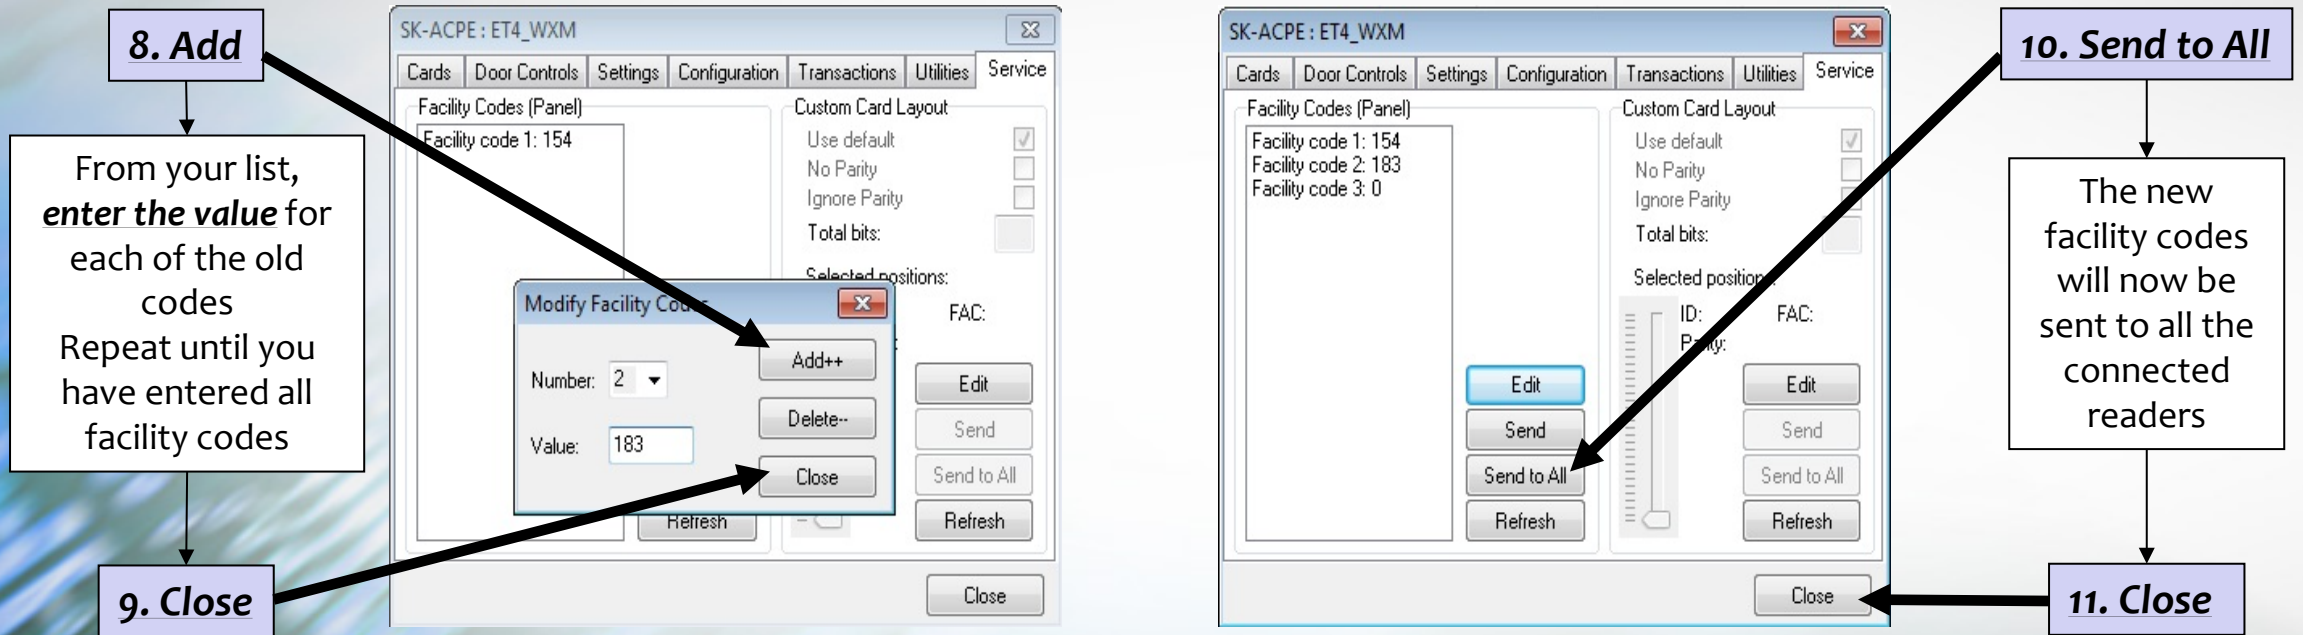

12. After closing the Readers Properties, Backup when prompted

Securakey™  ... Thank you for your time

Please visit

www.securakey.com

techsupport@securakey.com