

# CHANGING THE BAUD RATE ON THE SK-LAN (LANTRONIX MODEL UDS-1100)

After connecting the UDS-1100, install the DeviceInstaller.

After Step #6, under Assigning an IP Address”, click **FINISH** and then use the following procedure to reset the Baud Rate.

Click on **SEARCH**.

Verify the Hardware Address matches the address located on the bottom of the UDS-1100 unit.

Double click on **UDS1100**.

Select **Telnet Configuration Tab**

Select **Connect**

Press **ENTER**

At the bottom of the screen you will see “**Your Choice**”, Enter “**1**”, Hit **ENTER**

Type in 38400 for Baud Rate, Hit **ENTER**

Continue to hit **ENTER** until “**Change Set-up**” appears.

Select #9 for “**Your Choice**”- “**Save and Exit**”, Hit **ENTER**.

**The screen will be shaded indicating the new baud rate has been saved.**

**Secura Key**  
A Division of SOUNDCRAFT Inc.

20301 Nordhoff Street, Chatsworth, CA 91311

Phone: (818) 882-0020 • Fax: (818) 882-7052

TOLL-FREE: (800) 891-0020

Website: [www.securakey.com](http://www.securakey.com) • E-mail: [mail@securakey.com](mailto:mail@securakey.com)