

e*Tag® Installation Instructions


SWITCHPLATE INSTALLATION DIAGRAM

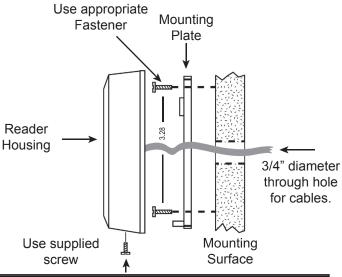

MULLION INSTALLATION DIAGRAM

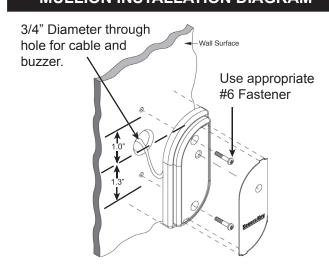

EXTERNAL ANTENNA CONNECTION

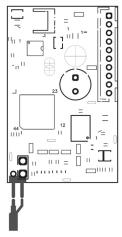


ET4-__E boards are designed for use with an external 50-ohm matched antenna. Contact Secura Key for stock antenna options. Connect antenna as shown. The recommended coaxial cable type is RG316.

INSTALLATION STEPS FOR SWITCHPLATE:

- 1. Drill holes as needed per installation diagram shown to the left.
- 2. Feed cable through 3/4" hole.
- 3. Attach the mounting plate to the mounting surface with the appropriate fasteners.
- 4. Attach the housing to the mounting plate by inserting the two tabs inside the top of the housing into the two slots at the top of the mounting plate.
- 5. Secure by installing supplied screws into the hole at the bottom of the reader.
- 6. Connect cable per wiring diagram shown below.

INSTALLATION STEPS FOR MULLION HOUSING:

- Drill holes as needed per installation diagram shown to the left.
- 2. Feed cable through 3/4" hole.
- 3. Attach reader to any flat surface with two #6 screws.
- 4. Snap label insert into front of reader to cover screws.

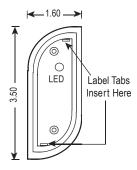

SPECIFICATIONS:

POWER REQUIREMENTS

9 – 14 VDC, 300 mA max.

INPUTS & OUTPUTS

LED Bicolor (Red/Green)
BUZZER Controlled by Host

Wiegand Output Sink Current 100mA Wiegand Output Source Current 5mA

Max. Signal Distance - TTL 10 ft. - RS-232 100 ft. - Wiegand 500 ft. - RS-485 4000 ft.

ENVIRONMENT

Ambient Temperature -35° to 70°C (-31°to +158°F)
Humidity- Potted Units 0 to 95% non-condensing
- Unpotted Units 0 to 90% non-condensing

COMMUNICATIONS


Wiegand Indu RS-232, RS-485 & TTL Obta


Industry standard protocol Obtain protocol from:


www.securakey.com/docs/rfid tech.html


e*Tag® Wiring Instructions

| READER CONNECTIONS | | | | | |
|--------------------|------------|----------------|----------------|----------------|-------------------------------|
| Wire # | Wire Color | RS-485 Models | RS-232 Models | TTL Models | NOTES |
| 1 | BLACK | GROUND (-) | GROUND (-) | GROUND (-) | |
| 2 | RED | 9-14 VDC (+) | 9-14 VDC (+) | 9-14 VDC (+) | |
| 3 | BLUE | HOLD LINE | HOLD LINE | HOLD LINE | Connect to Ground to Activate |
| 4 | YELLOW | BUZZER | BUZZER | BUZZER | Connect to Ground to Activate |
| 5 | BROWN | RED LED | RED LED | RED LED | Connect to Ground to Activate |
| 6 | ORANGE | GREEN LED | GREEN LED | GREEN LED | Connect to Ground to Activate |
| 7 | GRAY | RS-485 - A | TXD | TXD | |
| 8 | VIOLET | RS-485 - B | RXD | RXD | |
| 9 | WHITE | WIEGAND DATA 1 | WEIGAND DATA 1 | WIEGAND DATA 1 | Open Collector Output |
| 10 | GREEN | WIEGAND DATA 0 | WIEGAND DATA 0 | WIEGAND DATA 0 | Open Collector Output |

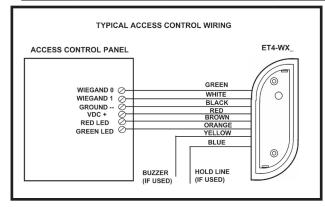

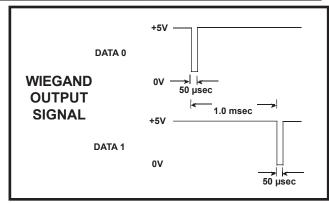

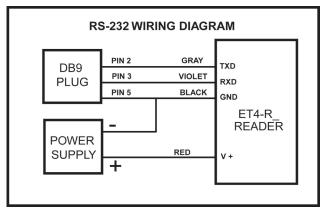

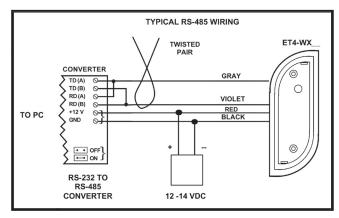

INSTRUCTION TO THE USER **FCC ID: NNHETAGS4**

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more or the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet of a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment has been certified to comply with the limits for a class B computing device, pursuant to FCC Rules. In order to maintain compliance with FCC regulations, shielded cables must be used with this equipment. Operation with non-approved equipment or unshielded cables is likely to result in interference to radio and TV reception. The user is cautioned that changes and modifications made to the equipment without the approval of the manufacturer could void the user's authority to operate this equipment.



CE O



IP64

PHONE (818) 882-0020 • FAX (818) 882-7052