

SECURA KEY CARD ACCESS CONFIGURATION GUIDE Single/Multi-Reader Systems with 28SA-Plus


28SA-PLUS READER SYSTEM USING SK-NET™ SOFTWARE WITH RS-232 GATEWAY CONNECTED DIRECTLY TO A PC

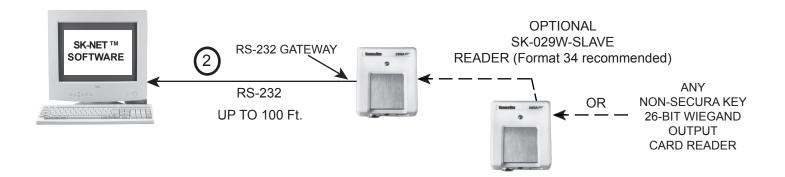


28SA PLUS READER SYSTEM USING SK-NET™ SOFTWARE WITH RS-232 TO RS-485 CONVERTER (NET-CONV-P)

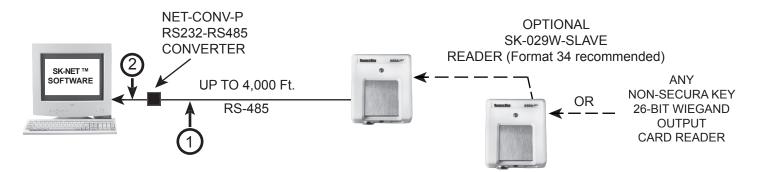

28SA PLUS READER SYSTEM USING SK-NET™ SOFTWARE- SINGLE LOCATION RS-232 CONNECTION

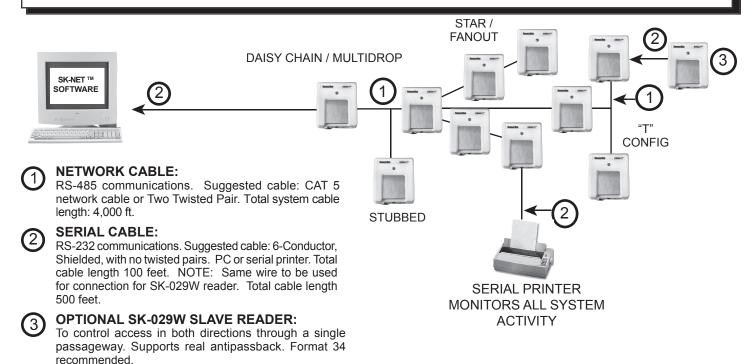


MULTI LOCATION SYSTEM WITH SK-NET-MLD SOFTWARE

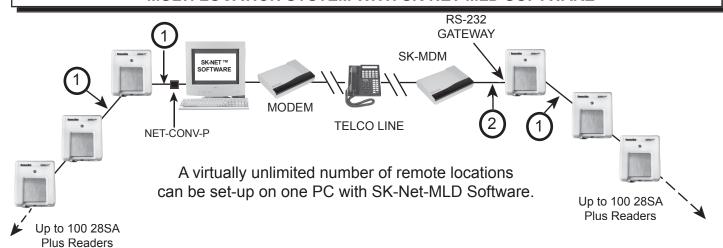


NETWORK WIRING CONNECTIONS

- Install SK-NM485 Network Module in each 28SA Plus
- Network Module fits inside reader housing and has built-in transient protection

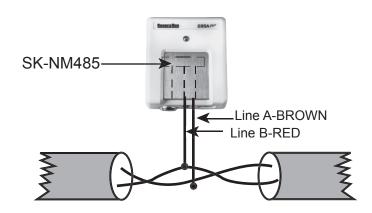

28SA PLUS READER SYSTEM USING SK-NET™ SOFTWARE- SINGLE LOCATION RS-485 with CONVERTER

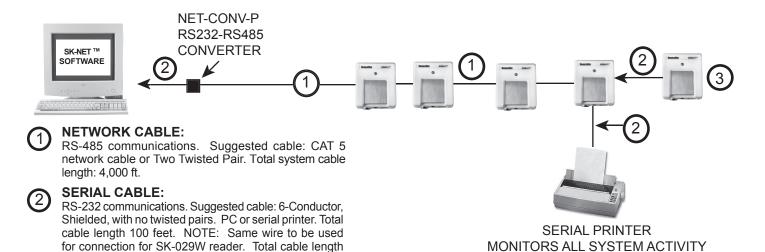


OPTIONAL SK-029W SLAVE READER: To control access in both directions through a single passageway. Supports real antipassback. Format 34 recommended

500 feet.

Note: When using the RS-232 to RS-485 converter, you cannot use the stubbed, star fanout or "T" configuration. All network connections from 28SA Plus to the next 28SA Plus must be in parallel with each other. The SK-NM485 module, Pins 1 and 2 must be a twisted pair. Pin 3 (Ground) is NOT normally connected, but if required, can use 1 conductor of a second pair.

28SA PLUS READER SYSTEM USING SK-NET™ SOFTWARE- SINGLE LOCATION WITH SK-LAN

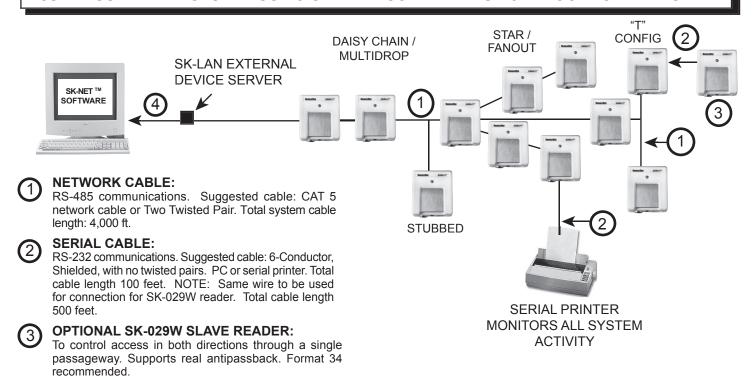

ETHERNET CABLE:

ing LAN.

Standard ethernet cable connector connected to exist-

SYSTEM EQUIPMENT COMPONENTS

ENTRACOMP® 28SA Plus:

28SA-PLUS-SM: Surface Mount Housing 28SA-PLUS-FM: Flush Mount Housing 28SA-PLUS-MH: Metal Surface Housing

SK-029W Optional Slave Reader for 28SA Plus - (Format 34 Recommended):

SK-029W-SM: Surface Mount Housing SK-029W-FM: Flush Mount Housing SK-029W-MH: Metal Surface Housing

SKC-06 — Cards - Specify quantity
PD-26 — Programming Deck - One recommended for each System
TS — Tamper Switch

SOFTWARE:

SK-NET™- DM — Basic Software - CD-ROM and manual SK-NET™ -MLD — Multi-Location Software with CD-ROM and manual SK-NET-MLD - CSXX (XX= 2,5,10 or 15 workstations) with Client Server License

ACCESSORIES

PMA — Post Adapter-For Mounting Reader to a Post (ie. Parking Lot)

FMA — Flange Adapter - For Mounting on a Metal or Block Wall

NET-CONV-P — RS-232 to RS-485 Converter with Power Supply (12 VDC@100mA)

one required per system (unless using a gateway connection)

SK-QUICKCONN — Cable & Connector - For Bench Testing or field connection with a laptop

SK-MDM — Modem - 56K Baud External Modem


for dial-up connection to any SK-ACP

SK-LAN — TCP/IP External Device Server w/ Power Supply

PC REQUIREMENTS: See Table

MINIMUM REQUIREMENTS*			
OPERATING SYSTEM	PROCESSOR SPEED	RAM	AVAILABLE DISK SPACE
WINDOWS® 2000	700 MHz	96 MB	100 MB
WINDOWS® XP	1 GHz	256 MB	1 GB
WINDOWS® VISTA	1 GHz	1 GB	1 GB
RECOMMENDED SYSTEM			
WINDOWS® XP	2 GHz	1 GB	10 GB
WINDOWS® VISTA	1.6 GHz, DUAL-CORE 64-BIT	2 GB	1 GB
If using Vista, Aero-capable discrete graphics card with 128 MB Graphics Memory.			
SERVER REQUIREMENT**			
WINDOWS® 2000 OR GREATER	1.4 GHz	512 MB	20 GB
** For SK-NET-MLD-C/S version, a server is required.			

SECURA KEY 28SA Plus Typical Door Installation

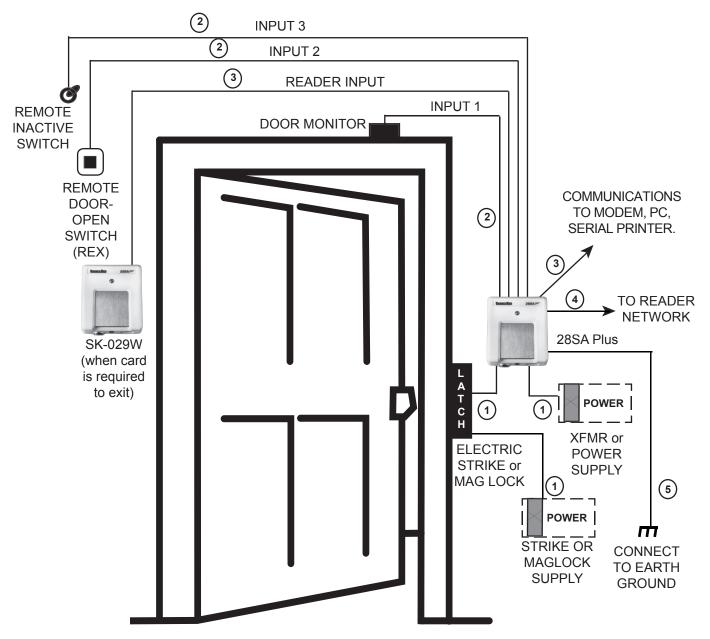

CABLE TYPES: 1 2 COND, UNSHIELDED 16-18 AWG

- 2 2 COND, UNSHIELDED 18-24 AWG
- 3 6 COND, SHIELDED, NO TWISTED PAIRS, 18-24 AWG
- 4 RS-485 CAT 5 NETWORK CABLE OR TWO TWISTED PAIR
- (5) 1 CONDUCTOR UNSHIELDED, 16-18 AWG

NOTES:

Power: 12-24VAC OR DC 125 mA

Power with slave: 12-16 VAC or 24 VDC 250 mA



20301 NORDHOFF STREET CHATSWORTH, CA 91311 PHONE (818) 882-0020 • FAX (818) 882-7052 TOLL FREE (800) 891-0020

E-mail: mail@securakey.com • Web site: www.securakey.com